 


Drum Monitor Amplifier

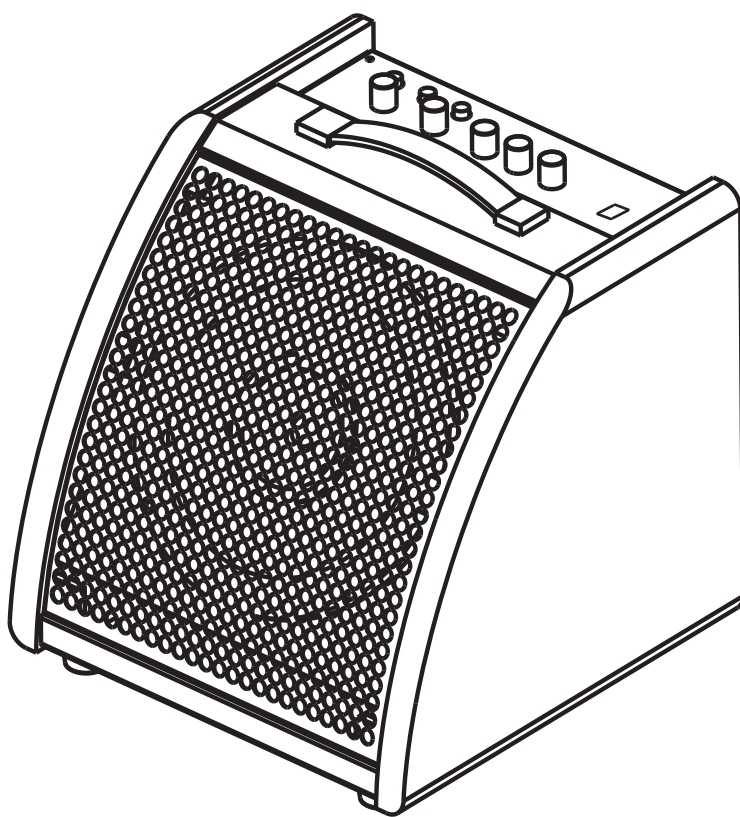

Owner's Manual

INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated power cord to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the power cord when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

 
Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, unplug the power cord from the wall outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Panel Controls

Front Panel

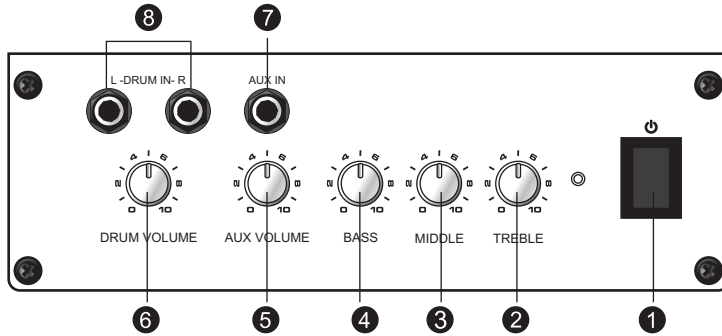


- 1 Power Switch**
Press to turn the power on.
Press and hold for a while to turn the power off.
(The amplifier can't be turned off when feed in continuing signal and will turn off automatically if there's no input for about 25 minutes)
- 2 Treble Knob**
Control the treble level.
- 3 Middle Knob**
Control the middle level
- 4 Bass Knob**
Control the bass level
- 5 Aux Volume Knob**
Turn this knob to control the output level of the external audio signal.
- 6 Drum Volume Knob**
Turn this knob to control the output level of digital drum.
- 7 Aux IN Jack**
Input jack for connecting external audio equipment.
- 8 Drum IN Jack (left and right)**
Input jack for digital drum.

Rear Panel

Note:

 - If using power supply is not consistent with what the amplifier required, the fuse may be damaged.
- If the amplifier can not work normally, please check if the fuse is OK.



100

95

75

25

 
5

0

Connection


Connect the AC power jack

1. Connect the power cable to the AC power jack on the rear panel.
2. Plug the power cable into an AC power outlet.

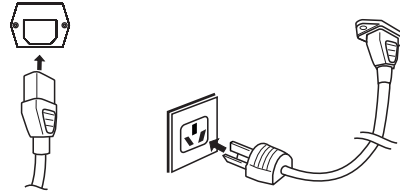


Connect the Drum IN jack

 1. Connect the digital drum source and the amplifier's DRUM IN jack with an audio line when the amplifier is powered off.
2. The volume of the digital drum could be adjusted by the DRUM VOLUME knob.

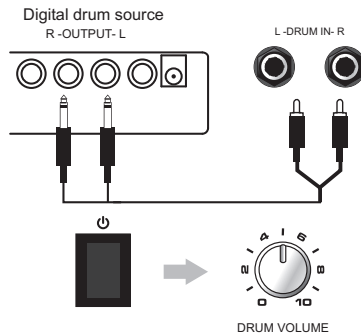

Connect the Aux IN jack

 1. You could play drums along with your favorite song, simply connect your external audio device (such as MP3/CD player) to the AUX IN jack.
2. The volume of the external audio device could be adjusted by the AUX VOLUME knob.

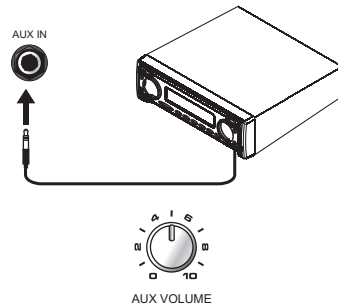

WARNING

Be sure to turn down the volume of the amplifier before connecting audio cable. Inserting jack into the connectors can cause noise which may damage the speakers of the amplifier.

Specifications

| | |
|---------------------|-------------------------------|
| Power Supply: | AC voltage shown on nameplate |
| Rated Power Output: | 30W |
| Weight: | 15kg |
| Dimension: | 351x345x347mm |

AP30(ERP)_G09